 



FUJIFILM

DIGITAL CAMERA
FinePix F480



FinePix F480

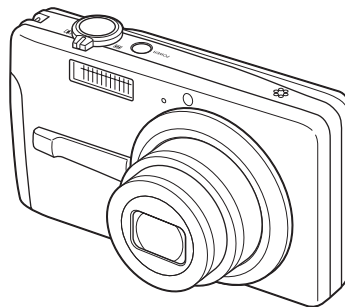

Digital
Tools for the imagination.

Exif Print

xD
xD-Picture Card™

SD
HC

PictBridge



BL00641-200(1) **K**

CD-ROM

CD-ROM

(" ")

가

CD-ROM 3 가 3 가
, 3 3

1.

- (a) " " " BZ" " CD-ROM
(b) " " "
(c) " " "

"Software for FinePix

(d) " " ()

2.

- (a)
(b) 가
(c)

3.

3.1 3 , , , ,

3.2

3.3

3.4

4.

3 가

5.

90

가

6.

가 5

3

7.

가

()

8.

가

9.

가

10.

9

11.




(),

12.


.....	2
.....	3
.....	4
.....	6
.....	7
.....	8
LCD	9
.....	
.....	10
.....	12
.....	14
.....	17
,	18
.....	21
.....	22
.....	
()	23
.....	27
.....	29
.....	30
/	34
(/n)	34
[]	34

.....	
-	37
.....	39
.....	41
e ()	46
d	47
*	49
j 가	51
[]	52
[]	52
[]	55
()	55
()	55
()	57
()	58
()	59
.....	
[]	60
[]	60
[]	61
()	61
((DPOF))	61
()	65
()	66
()	69
()	70

고급기능 - 동영상

 동영상 녹화	72
카메라를  동영상 모드로 설정	72
동영상 녹화	73
 동영상 재생	74

설정

[ SET-UP]	76
[SET-UP] 메뉴 사용	76
[SET-UP] 메뉴 옵션	77

카메라 연결

TV에 연결	85
프린터에 카메라 직접 연결	
— PictBridge 기능	86

소프트웨어 설치

Windows PC에서의 설치	90
Mac OS X에서의 설치	92
PC에 연결	95
FinePixViewer 사용	98

부록

시스템 확장 옵션	100
액세서리 가이드	101
카메라의 올바른 사용법	103
xD-Picture Card™, SD 메모리 카드 및	
내장 메모리에 대한 참고사항	104
경고 표시	109

문제해결

문제해결	109
------------	-----

제품 사양	115
용어 설명	122

사용 가능한 메모리 카드

FinePix F45fd 에 xD-Picture Card와 SD Memory Card를 사용할 수 있습니다. 본 사용자 매뉴얼에서는 이 카드들을 "메모리 카드"로 표현합니다.

Z



가


Z 가

FinePix F480 **xD-Picture Card** SD Memory Card SDHC

Z 4- (n o p q)

/ / /

. / n o , / p q

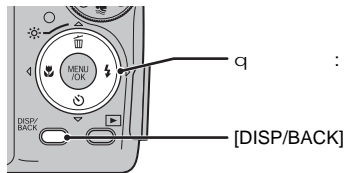

Z

FinePix F480

- FinePix F480 AV
- FinePix F480 USB/V

"A/V" "USB"

Z

6

LCD

 
[]

• AA


(NP-40N) (1)




• (1)




• BC-40N (1)

 


• A/V 1

 

• USB 1

 

• **CD-ROM 1**
Software for FinePix CX


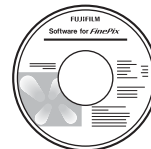



• () 1

•




1 2

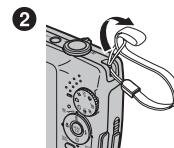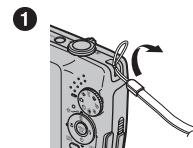

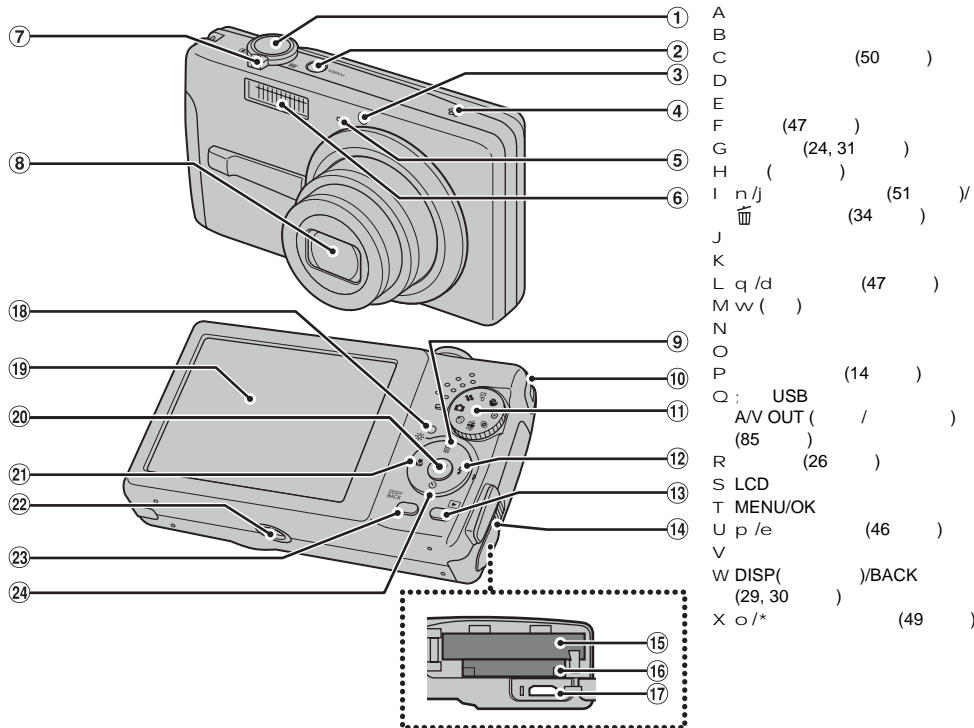


LCD

Z

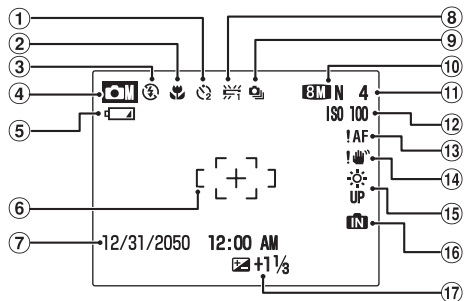

A ((49) L ISO 100 (55)
 B e () (46) M { AF (105)
 C C (47) N |
 D s (39) (105)
 E (20) O * 가 (51)
 F AF (24) P Y (16)
 G / (18) Q S (57)
 H 9 (58)
 I f (59)
 J i N (55)
 K 가 (120)

Z

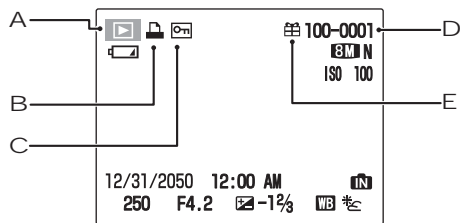

A w (30)
 B u DPOF(61)
 C F (65)
 D (79)
 E (30)

FinePix F480

가 . 가 LCD Y 가

z 가
NP-40N 1




-
-
-
-
-
-

가
가
NP-40 " (").
가


1

BC - 40N.

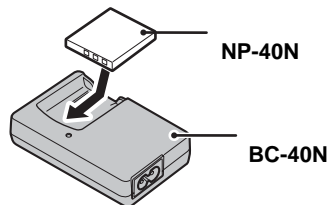

2

2

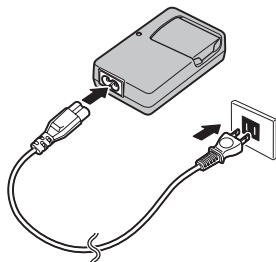

Z < >

Off	가	
Off	()	
		-



가


- 가
- NP-40N

NP-40N

가
(1-2).

가

1


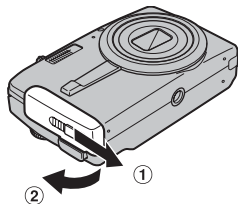


가

가


2

가

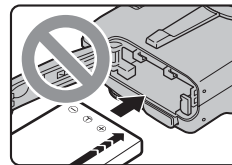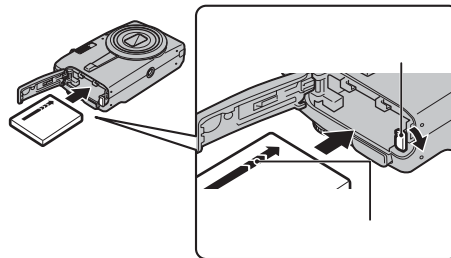

Q

3

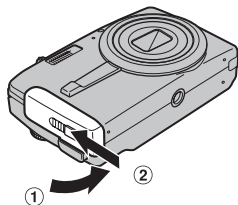

AC

AC-5VX DC CP-40N
) AC-5VX CP-40N

AC
(

xD-Picture Card SD

(
FinePix F480
)

SD /SDHC
FUJIFILM Corporation

: SanDisk





- <http://www.fujifilm.com/products/digital/cameras/index/html>
- SD
- SD

1





2

(xD-Picture Card)

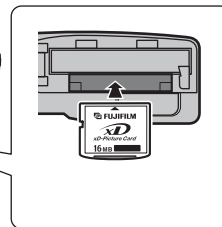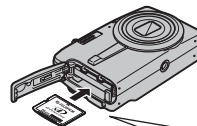

(SD


)

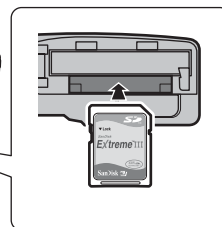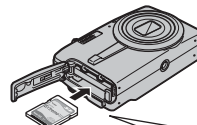




SD



가
SD 가

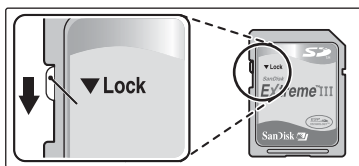

- PC 가
- (→82). 가 miniSD microSD

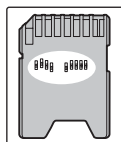

3

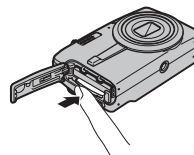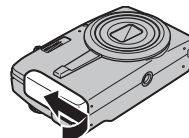


가 가

Q

[POWER]
[POWER]

가

가

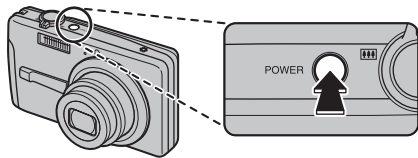

w



가

가

가


w

1

w

가

가

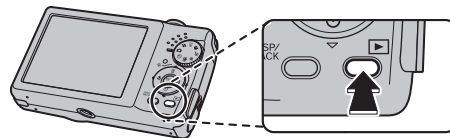

1

[言語/LANG.]




A n, o, p q



B MENU/OK

2

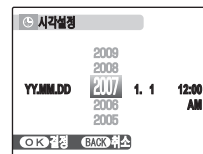

A p q , , , ,




B n o



• n o "12" 가 AM/PM

Q

3

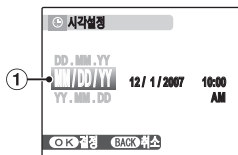

A p q



B n o



C

MENU/OK

: 2007 12 1
 [YY.MM.DD]: [2007.12.1]
 [MM/DD/YY]: [12/1/2007]
 [DD.MM.YY]: [1.12.2007]



START MENU

. AC

30


2



2 ~ 5
 (→83).

w 1

LCD

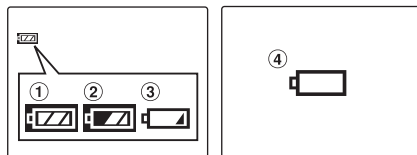

- A . ()
- B 가 가 . ()
- C 가 . ()
- D 가 가 . ()



- (, , V) 가
- 가 (V) 가 가
- 가 V

1 [SET - UP]



A [MENU/OK]



B n o [SET SET-UP]



C q

2 []



A p q 1



B o



C n o []



D q "2 " (->18)

1 [SET - UP]



A MENU/OK



B n o [SET-UP]



C q

2 [言語/LANG.]



A p q 2



B o



C n o [言語/LANG.]




D q "1 [言語/LANG.]
" (-→18)

()




1

A [POWER]

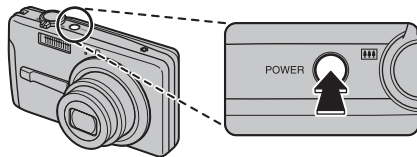

B

 q

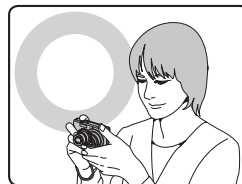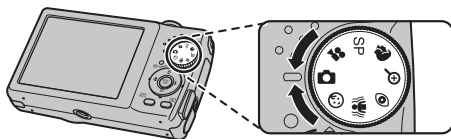

가

가



!

. (). 가 ()가

Q

2 LCD

[]

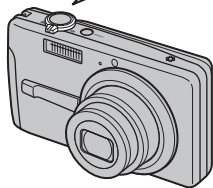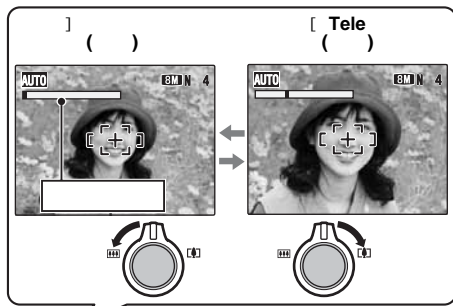

- 40 cm ~ (35mm)
- 28 mm ~ 112 mm
- 4x




• e

(→46)

- 가
- (→41, 80).

3 AF

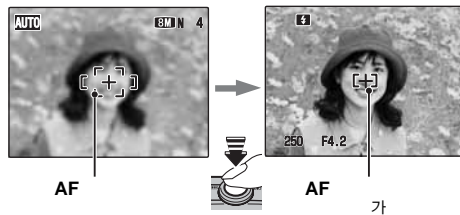

•

가

•


{

가



!

4

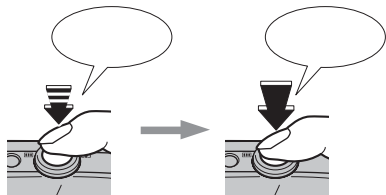

!



- 가 AF 가 AF/AE (-27).
- 가 AF

가 가

!

- LCD
- (→30).
- LCD 가
- 105-108 " (→109-114)



가 LCD
b 가


47

Q

()

z

가

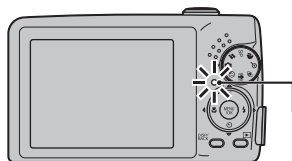


	(가) , AF AE
	(가)
	(가)
	<ul style="list-style-type: none"> 가 , 가 가 가



). 가 LCD

(→105-108

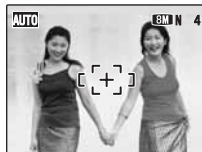

(, 2)가 AF

AF/AE :
AF/AE (→28).


AF/AE

1

AF




2

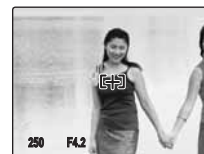

Q


3

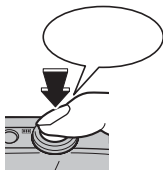

- AF/AE
- AF/AE
- FinePix F480

(AF AE).

FinePix F480

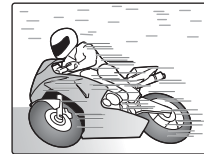



- 가
- 가
- 가 (:)
- ()가 AF 가 가
- AF/AE (→27)



LCD

DISP/BACK

LCD

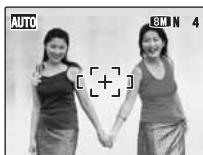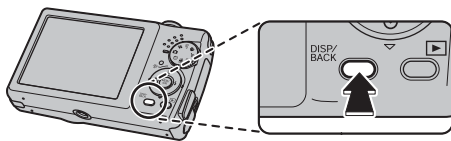

가


가



AF/AE

. AF/

AE

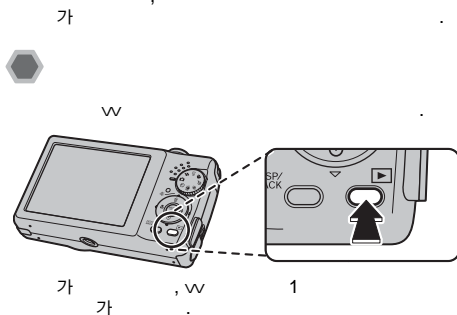


- w , LCD 가
- FinePix F480가 LCD

! FinePix F480
FinePix F480
xD-Picture Card SD
(FinePix F480

LCD


[DISP/BACK]

LCD

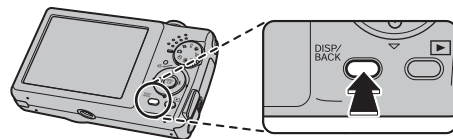




p :
q :

 

p , q 1 .
p q
,

 

1 /

:

] ()

[tele
()



[]

Q

2



()



n, o, p q

z

i (3264 × 2448)	5.1
% (3264 × 2176)	5.1
4 (2304 × 1728)	3.6
2 (1600 × 1200)	2.5



DISP/BACK



(9) .9




A n, o, p, q ()



n o



B MENU/OK 가

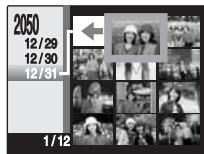

A n, o, p (q)



B MENU/OK

가



A n, o, p (q) ⇐



B p



C n o (n o)



D q




/

(-30^w)



(/n)

(n)

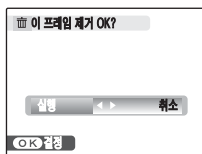

A p q



B (n)



C p q OK



D MENU/OK



[]



A MENU/OK []




B n o []



C q

w (→30)

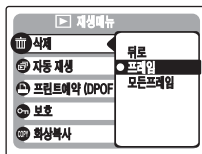


D n o [] []



E MENU/OK

([]))

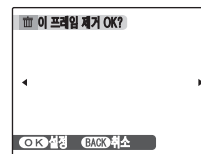

A p q ()



B MENU/OK ()



() 가 [DISP/BACK]



MENU/OK () ()

Q




/

w


(→30)

()

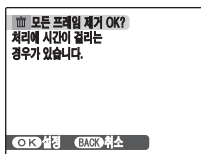

MENU/OK

()

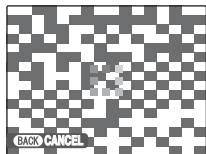

[DISP/BACK]

()

()



• BACK

()

• ()

(→65).

• "DPOF SPECIFIED. ERASE OK? " "DPOF SPECIFIED. ERASE ALL OK?"가

[MENU/OK]

()





()

. PC

Z [](MENU/OK)

[ISO]]	(→55).
[←]]	(→55).
[⊞]]	(S) (→57).
[WB]]	(S) (→58).

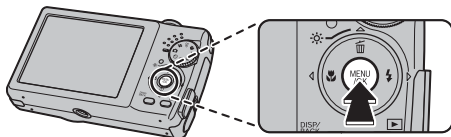

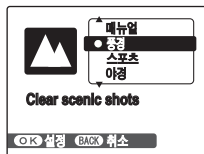

A MENU/OK



B n o []



C q



D p q



E MENU/OK

(→39)

가 가 (→39)

[]

가
[] []

[]

C



[]

[b]

()




가 ,가

[]

3

Z

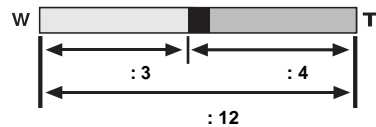

Q

(→39)



LCD

[SET-UP]

(→80)

가

가

[m]



[,]



[]

[.]



[8]

3



(→39)

[]

가




가

[가]



[]

[]

가



[]

가



[]



• []

• []


• []

: 1/2 ~ 4

Q

(→39)


z []

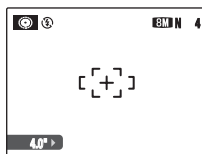

p

q

 []



• []

•

: 5 cm ~ 2 m

: 30 cm ~ 2.0 m

(→39)

[ㄹ]

가



[ㅎ MUSEUM]

가 [, AF 가



[TEXT]



: 5 cm ~ 2 m
: 30 cm ~ 2 m

[S]



- [ㄹ] (→57)
- [ㅎ] (→58)

e ()

가 : S, AUTO, , , , , OFF
(→41, 43, 44, 45)

e (p)

e (p)

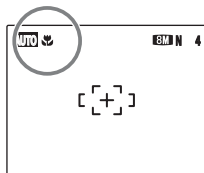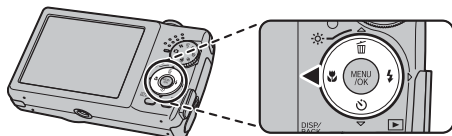

e 가 LCD



- : 5cm ~ 80cm
- : 30cm ~ 80m
- 50cm ~ 80m





- * 
- e Macro

- 가
- []

d

48 가 6가

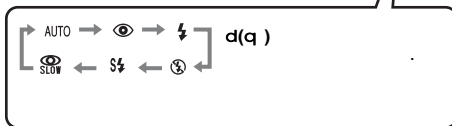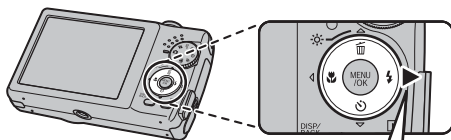

b 가 , 가 LCD

[AUTO] ()

가

[b]

가 ,가



[d]

가

[C]

가

Q



d

[c
[n +]]

8 가 n 3



, 가



(ISO : [])
: 50cm ~ 4.0m
: 50cm ~ 2.2m

가



• 가 (가)
([AUTO])

• b).

• LCD 가 가

• 가 가
().



	AUTO	b	d	C	c	n
s	✓	✓	✓	✓	✓	✓
AUTO	✓	✓	✓	✓		
☺				✓		
///	✓	✓	✓	✓		
b		✓				✓
⊕	✓	✓	✓	✓		
m	✓	✓	✓	✓	✓	✓
,				✓		
.	✓		✓	✓		
8				✓	✓	✓
👁				✓		
📷	✓	✓	✓	✓		
🔍	✓	✓	✓	✓		
☀				✓		
🌅		✓		✓		
✳				✓		
🍷		✓				
OFF				✓		
TEXT			✓	✓		



★

가

가 : (→41-45)




* (○)

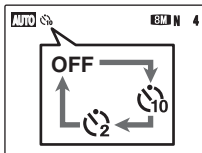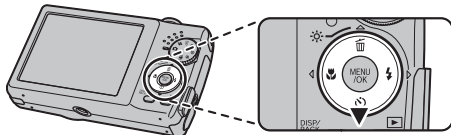

☺: 10

(: 2

1



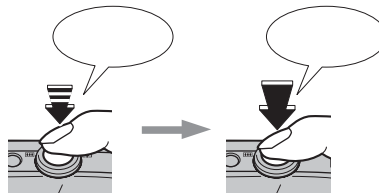


()

Q

*

2

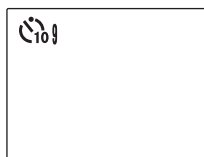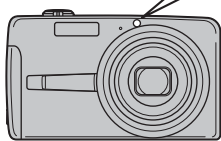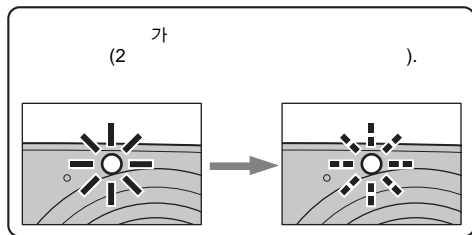

LCD

2



• BACK]

가 [DISP/

()가

j

가

LCD

가



LCD

가



j (n)
j (n)

LCD

가

LCD

가

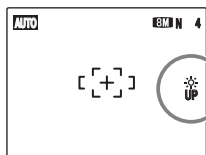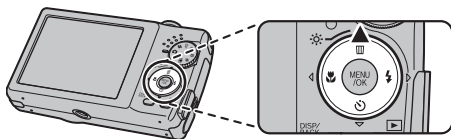

UP 가

LCD



-
-
-
-
-

가

가 가



[]

[]

[]



A MENU/OK

[]



B n o



C q






















D n o



E MENU/OK

z []

[ (-39)]	?	s / / / 8 /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / /	


[]



가 q, ☺, 📶, 🔍, m

가 , , , 8, (N), 📶, 📶, 📶,
(☀️, 🌧️, 🌸, 🍷, OFF, TEXT) ?).

가 s (?).

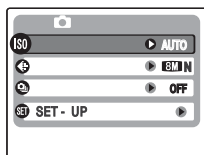

[]

(-52)

([ISO])

([⏪])

()

Z


i F (3264 × 2448)	10R (25.4 × 30.5 cm) / A4 / A3
i N (3264 × 2448)	
% (3264 × 2176)	i F
4 (2304 × 1728)	6R (15.2 × 20.3 cm) / A5
2 (1600 × 1200)	4R (10.2 × 15.2 cm) / A6
~ (640 × 480)	



[AUTO]/[800]/[400]/[200]/[100]
[AUTO]

가 가

[AUTO]

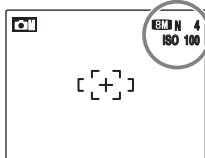

LCD



[⏮ MANUAL],
[AUTO]

[]



가

가



[]

%



%



4:3
3:2가 (35 mm

%

).




- 가 , .
- .
- (→120).



([])

가 :S (→45)

() 가

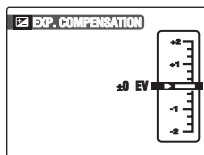


(+)



(-)



- : -2 EV ~ +2EV
(1/3EV 13)
- "EV"(→122)
- LCD 가

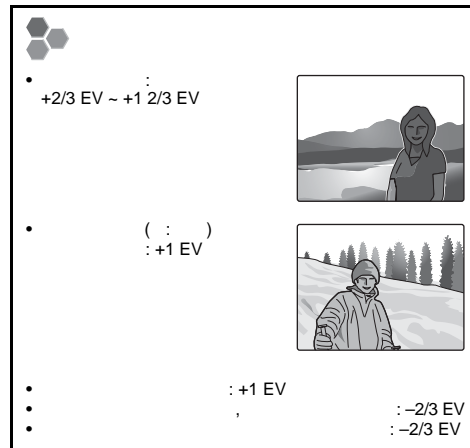


- (S 가). 가
- "0" . 가 :
- - AUTO b
- - d

[] (→52)



([WB])

가 :s (→45)
()

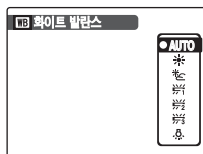

AUTO:

6 :
7 :
9 : (Daylight)
0 : (Warm White)
- : (Cool White)
8 :



• [AUTO]

가 C
.(→47).
가
()
(→122)

[]



[]



A

w

(→30)

▶ 재생메뉴



B MENU/OK

[]



C n o



D q



E n o



F MENU/OK

[

]

(→60)



))



(DPOF))

DPOF




- [MENU]
- P

]

MENU/OK

(→83)

DISP/BACK

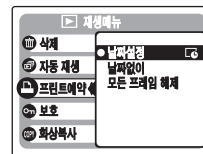

[

]E

:

가

[

]

:

가

[

]


:

Q

[] (→60)

[] / []

[E] , LCD E 가
가

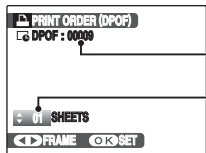

A p q ()



B n o
99 ()
0()

가

A B



C MENU/OK
. DISP/BACK




D MENU/OK 가



A MENU/OK [] n o
[(DPOF)]
B q
C n o [E], []
. MENU/OK
D p q
()
E o 0()
() D
E
[MENU/OK]
• [] (→63)

(→60)

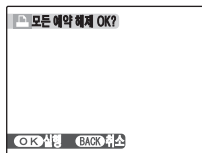

가
() , [] OK?] 가

[MENU/OK]

() ()

 
999

()




[DISP/BACK]

- [E] , 가 DPOF
() 가
- FinePix F480




:

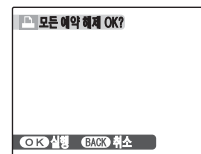

[(→61)]. []






MENU/OK

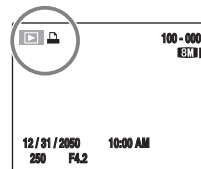

LCD

가
u 가

(→60)

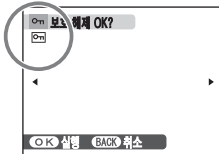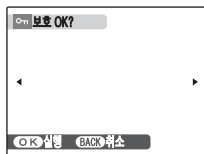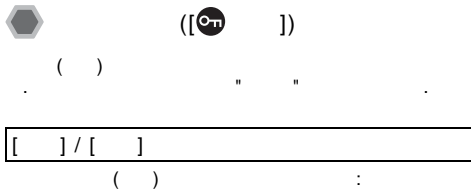

(F)




 
A p q /





B MENU/OK

가

() / : ()
: ()
가 A B
DISP/BACK

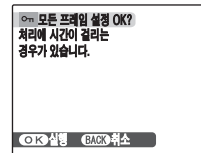

MENU/OK
가

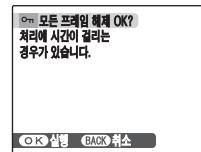 

MENU/OK

[] (→60)



가 , ()

BACK

DISP/



(→82 () ()
()



([COPY])

" "

Z []



A n o [Y Q Y Q]
[\ [\ Q Y]



B q

(→60)


([1])



A n o [1]



B [MENU/OK]

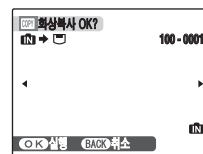

C p q ()



D MENU/OK
()



가 () C D
() 가 DISP/BACK

Q

[] (→60)


([])



A n o []



B MENU/OK

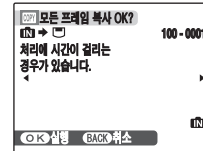

C MENU/OK
()



- LCD [\] [Y]
- 가 , 가 [Y]

LCD

가 가

() () (→65).



FinePix F480

FinePix F480



A p q




B MENU/OK []



C n o [2]



D MENU/OK

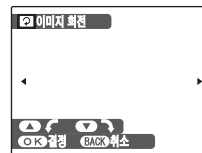

E n	o	가	
o:		90	
n:			90



F MENU/OK

가




DISP/BACK

[] (→60)

⬡ ((⬢))

1

 A w (→30)

 B p q ()

 C MENU/OK []

 D p q [⬢]

 E q


2

] ()

[tele ()



A []

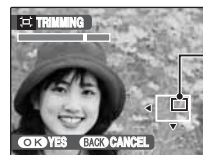

()




B n,o,p q

(→60)



C MENU/OK

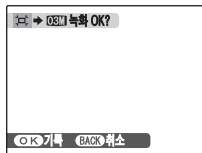

3



가 가

MENU/OK



• DISP/BACK single-frame



• 0.3 M , k []

4	6R (15.2 x 20.3 cm) / A5
2	4R(10.2 x 15.2cm) / A6
-	

• % (4:3)




FinePix F480

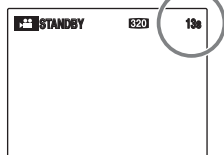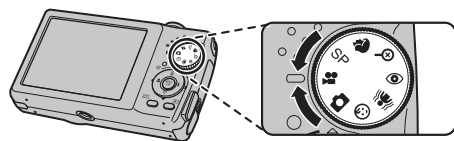


LCD

가

Z

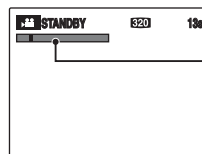

- 28mm ~ 112mm(35mm : 4)
- 40cm ~

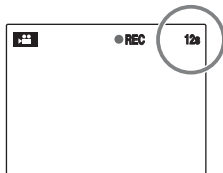

, LCD 가
[I REC]



가



- : JPEG (→122).
- : \$ (320 × 240)
- (→122): 30 ()



- LCD
-
-
-
- 1
- 120 가




- AC () 가

- FinePix F480
- 가 가 (→8).
- DPC- M1GB Card "M" xD-Picture
- 가 , xD-Picture Card (
-) PC 2 GB

W

W
(-35)

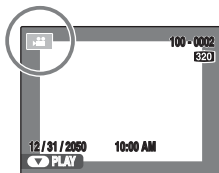


A p

q
LCD

r 가



B o

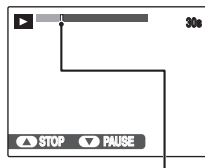

LCD

Z

		.
/		o
		p q
/		p q
		q ,p p q



가



- PC


PC

- FinePix F480

가

가 가

FinePix F480

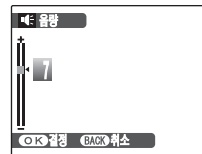

A

MENU/OK



B n o



C MENU/OK

[**SET**]

⬡ []

1 []



A MENU/OK



B n o [**SET**]



B q

2



A p q



B o

3



A n o



B q



C n o



D MENU/OK

[] (→76)

[]

q	[]	[3]/[1.5]	[1.5]	(3 1.5)	–
	[]	[CONT.]/[RENEW]	[CONT.]		79
	[]	[ON]/[OFF]	[OFF]		80
	[LCD]	[ON]/[OFF]	[ON]	LCD	81
1	[]	–	–		21
	[]	•••••/•••••/•••••/•••••OFF	•••••		–
	[]	•••••/•••••/•••••/•••••OFF	•••••		–
	[]	–	[7]		81
	[LCD]	–	[0]	LCD	82


Q

[] [] (→76)

2	[]	—	—	()	82
	[言語/LANG.]	[日本語]/[ENGLISH]/ [FRANÇAIS]/[DEUTSCH]/ [ESPAÑOL]/[ITALIANO]/ [中文簡]/[繁體]/[한글]/ [РУССКИЙ]/[PORTUGUÊS]/ [NEDERLANDS]/[TÜRKÇE]/ [ČESKY]/[MAGYAR]/ [POLSKI]/[SVENSKA]	[]	LCD	22
	[]	[5]/[2]/[OFF]	[2]	.	83
	[]	N /I	N	.	83
	[]	[NTSC]/[PAL]	—	[NTSC] [PAL]	—
3	[]	—	—	([] [] 가 [MENU/OK]	—

[] (→76)


[]

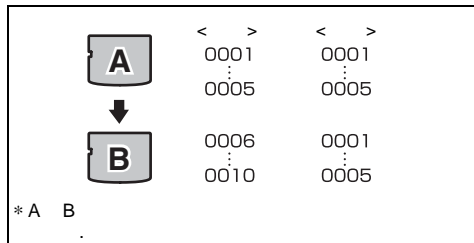

[] : 가

[] : "0001"

가
가

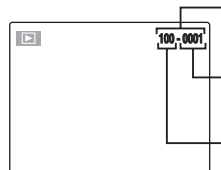

LCD
4


3 7




- PC 가
- ([] (→76))
가 "0001"
- [] 가
- 가

[] (→76)

[]

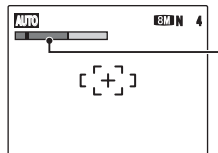

Z

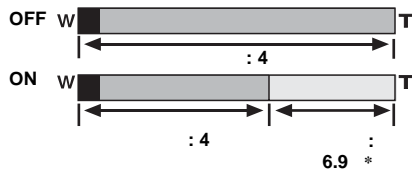

[] .[]



- 28 mm ~ 112 mm *
- 112 mm ~ 773 mm *

: 6.9

* 35 mm



" " 가
" "

[] (→76)

[LCD]

8 LCD 가




가 가



[LCD]

[]

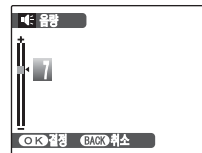

A n o
가

가

.0()




B MENU/OK



[] [] (→76)

[LCD]

LCD

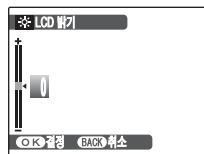

A n o LCD


+ LCD LCD 가
- LCD 가



B MENU/OK

[]

([])

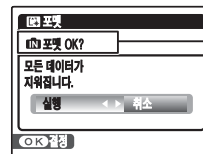

[Y]:

[N]:



A p q



B [MENU/OK]
가



• () ()

() PC

•

☞ [] [] (→76)

[]

가 2 ~ 5



(→86, 95) (→61), USB
([])



"(→17)

[]

가

가
1



n o [N] [I]
[N]: [I]:
[I]:


Q

[] [] (→76)

2 []



3

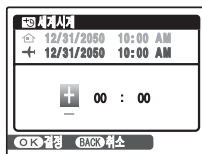

A p q +/-



B n o




C

MENU/OK



가
-23:45 ~ +23:45 (15)

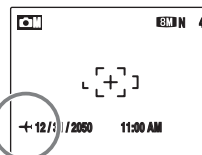

LCD 3 "s"가

가 3

가




[N]

TV

TV

(→61)

가

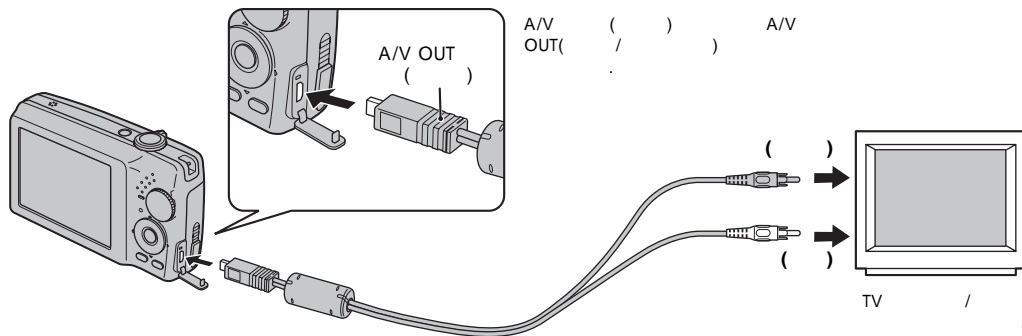

• A/V () AC

• AC



• A/V () TV LCD 가

• TV [PLAYBACK VOLUME]

TV TV

• FinePix F480가 TV AC-5VX() CP-40N ()


— PictBridge



PictBridge



1 USB

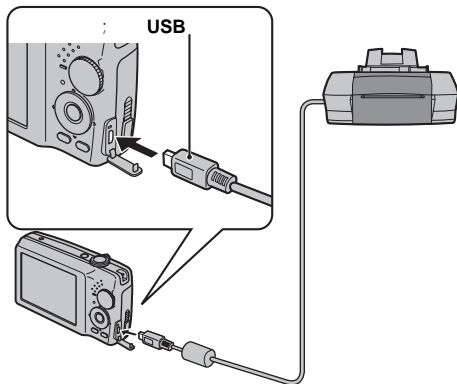


FinePix F480
() CP-40N ()

AC-5VX

2

1

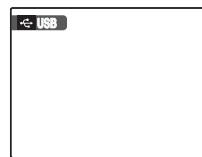


LCD
USB]



3


LCD

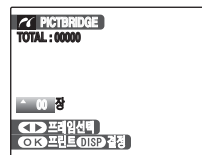

"
→87
"DPOF
→88
"



([] / [])

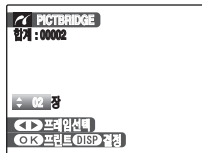

A p q () []




B n o
99

가 []

A B



C MENU/OK

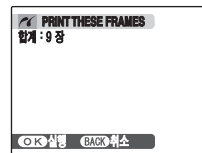


D MENU/OK

가
가



가 0 / /
가 . / /

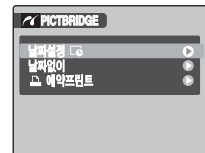

A [DISP/BACK]

B n o
[E]


C MENU/OK



[E]

— PictBridge

⬡ DPOF ([u])

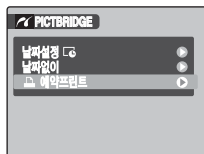

DISP/BACK




A MENU/OK



B n o [u]



C [MENU/OK]

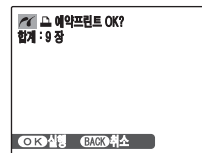

D MENU/OK

가



[u DPOF]


FinePix F480
(→61).



DPOF
(→61),

[E]

가

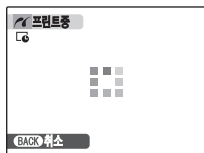

[DISP/BACK]

가

가

A [] LCD

B . USB



DPOF



- PictBridge
-
- FinePix F480
-
- FinePix F480

Windows PC



Z

가

*1	Windows 98 SE Windows Millennium Edition (Windows Me) Windows 2000 Professional*2 Windows XP Home Edition*2 Windows XP Professional*2 Windows Vista*2	Windows XP	Windows Vista
CPU	200 MHz Pentium (Windows XP/Vista : 800MHz Pentium 4)	2 GHz Pentium 4	3 GHz Pentium 4
RAM	128 MB (Windows Vista : 512 MB)	512 MB	1 GB
	: 450MB : 600MB	2 GB	15 GB
	800 x 600 , 16	1024 x 768 , (32)	

*1

가

*2

(: "Administrator").



- OS . (Windows 98SE/Me: FinePixViewer, Windows 2000/XP/Vista: FinePixViewer S)
- 가 USB
- Windows 95 Windows NT
- PC

PC

가 PC

1 FinePixViewer

A []
 * Windows XP [] []
 Windows Vista [] []
 B [] [FINEPIX] (CD-ROM)
 C CD-ROM [SETUP] [SETUP.exe]



* PC
 - (3)
 - (: Setup.exe Setup).
 (: Setup SETUP).

Windows Vista :
 CD-ROM PC [AutoPlay]
 [SETUP.exe]
 [User Account Control ()]가
 [Allow]

2 PC DirectX PC DirectX가

!
 • DirectX Windows Media Player
 PC가

3 PC [Installation of the FinePixViewer has been completed] 가 PC CD-ROM

Mac OS X

Z

가

Mac *1	Power Macintosh G3*2, PowerBook G3*2, Power Macintosh G4, iMac, iBook, Power Macintosh G4 Cube, PowerBook G4, Power Macintosh G5, MacBook, MacBook Pro Mac Mini
	Mac OS X (10.3.9~ 10.4.9)
RAM	256 MB
	: 200MB : 400MB
	800 x 600 , 32,000
*3	<ul style="list-style-type: none"> FinePix 가 : : 56kbps 가 :

*1 PowerPC, Intel processor

*2 USB 가

*3 FinePix




- USB 가 PC . USB
- USB 가 USB 가
- 가 USB 가

1 Macintosh Mac OS X

2 CD - ROM CD - ROM
[FinePix] [FinePix]
[FinePix]

3 [Installer for MacOSX]

4 [Installing
FinePixViewer]

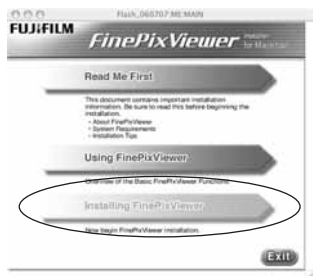

First] [Using FinePixViewer] [Read Me
5 [Authenticate]" [OK]

* Mac OS X
System Preferences Accounts

6 FinePixViewer

7 [FinePixViewer installation completed]
가 , [Exit]



Safari 가
CD-ROM
Dock [Safari] Safari
[Safari] [Quit Safari]
Safari

8 [Applications] [Image Capture]




Mac OS X

9 Image Capture

[Image Capture]

[Preference...]

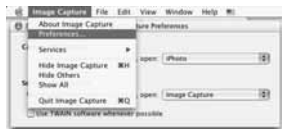

10 [When a camera is connected, open] [Other...]

11 [Applications]
[FPVBridge]

[FinePixViewer]
[Open]



12 [Image Capture] [Quit Image Capture]

[Quit Image Capture]

PC

PC

"FinePixViewer"

FinePix Viewer

(Windows) 가



Windows CD-ROM
CD-ROM

PC

92

)

PC



CD-ROM
(FinePix)

A 가

(→14).

FinePix F480

xD-Picture Card SD

" "




• FUJIFILM

PC

가

B USB

PC

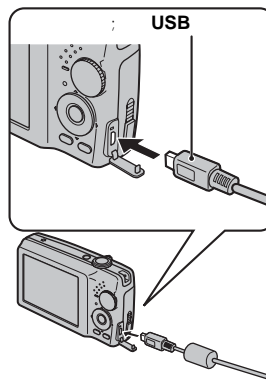

C w

1

가

D PC



Windows

FinePix Viewer가

가

Q

PC



- FinePix F480 PTP (Picture Transfer Protocol)/MTP(Media Transfer Protocol) PC . PTP/MTP 가
- 가 PC USB () USB ()
- Mac OS X PC
- PC가
- USB
- PC [Copying] 가 PC 가 USB
- 가 PC FinePixViewer
- FinePixViewer () FinePixViewer 가 PC



- AC AC-5VC()
- USB () 가
- USB () PC USB 가
- PC USB 가
- Windows 98 SE USB PC가
- 가 가
- USB ;
- POWER 가

PC (Windows 2000/XP/ Vista case)

PC가 FinePix Viewer가
Save Image Wizard ()
[Menu]



PC

(Image Memory Card Reader)



- PC가 PC
- [] OFF PC
- 가 PC FinePix viewer
Exif Launcher

"FinePixViewer " (→98).



(Mac OS X)

FinePixViewer가 가

PC



(Mac OS X)

- 가
- PC [Copying] 가 PC
가 가 USB ()

PC

FinePixViewer

FinePixViewer

FinePixViewer
use FinePixViewer"

Help

"How to

- **"How to Use FinePixViewer"**
"How to Use FinePixViewer"

A FinePixViewer Help
FinePixViewer"

"How to Use

B "Basic Operation"
"Slide Show"

C "Slide Show" 가
">>>"

"<<<"

Windows

- A PC 가
- B
- C

Windows 98 SE/Me

- FinePixViewer
- FinePix Resource

Windows 2000/XP/Vista

- FinePixViewer S

FinePixViewer

FinePix Viewer S Ver.2.*

FUJIFILM USB Driver



D 가 [OK]

. [OK]

Macintosh

FinePixViewer

[Finder]


FinePixViewer

[]



FinePix F480


 

 
가

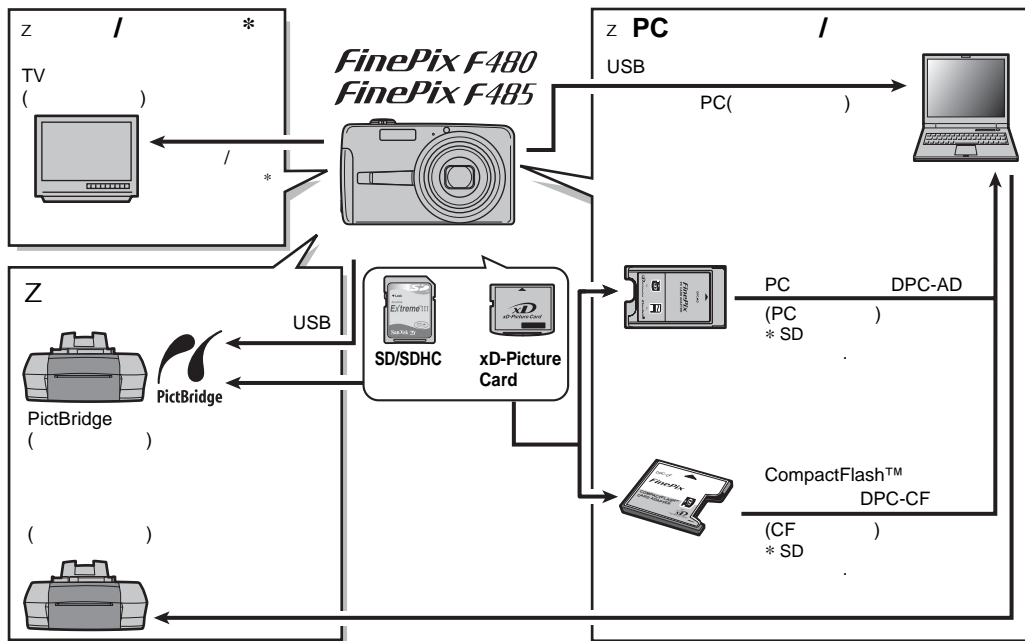

가




<http://www.fujifilm.com/products/digital/indes.html>

가

<ul style="list-style-type: none"> xD-Picture Card xD-Picture Card 16MB/32MB/64MB/128MB/256MB/512MB/1GB/2GB 가 xD-Picture Card: M (DPC-M2GB FinePix F480 M (). 	
<ul style="list-style-type: none"> BC-65S BC-65S +23°C 95 	
<ul style="list-style-type: none"> NP-40 	
<ul style="list-style-type: none"> AC AC-5VX AC-5VX * AC FinePix F480 PC 가 	

 Q

가

<ul style="list-style-type: none"> • DC CP-40N CP-40N 	<p>FinePix F480 PC , AC-5VX</p>	
<ul style="list-style-type: none"> • PC DPC-AD PC (Type II) - 16 ~ 512MB SD 	<p>xD-Picture Card SmartMedia PC ATA (PCMCIA 2.1) PC</p> <p>xD-Picture Card 3.3V, 2 ~ 128MB SmartMedia</p>	
<ul style="list-style-type: none"> • CompactFlash™ DPC-CF xD-Picture Card - SD 	<p>CompactFlash (Type I)</p>	

xD-Picture Card™, SD

- Z
 •
 • ()
 • FinePix F480 **xD-Picture Cards**
 FUJIFILM **xD-Picture Card**
 •
 •
 가
 M H xD - Picture Card
 • M
 가 M , DPC-M2GB). M (
 FinePix F480 M
 • H
 H M
 • 가 USB
 H **xD-Picture Card USB** DPC-UD1
 M 가

- Z
 • 가
 (, DVD-R, CD-R, CD-
 RW,).
 •
 • 가
 Z PC
 • PC
 • () 가 가
 • ()
 •
 • PC

CD

$\frac{1}{\sqrt{2}}$ ()	가	
	가 가	가
{	AF()	<ul style="list-style-type: none"> 가 2m AF (→27)
}		()가
[]	가	<ul style="list-style-type: none"> 가 A/S
[]	가	
[]	<ul style="list-style-type: none"> 가 PC 가 	<ul style="list-style-type: none"> (→82) (→82) 가 A/S

[]	<ul style="list-style-type: none"> 가 가 가 가 	<ul style="list-style-type: none"> (→82). 가 A/S FUJIFILM Corporation (→14). 가
[]		(→34)
[가]	<ul style="list-style-type: none"> 가 가 가 	<ul style="list-style-type: none"> 가 A/S (→82).
[]	SD Memory Card 가 "Lock()" .	(→15).
[가]	가 .	(→34),
[가]	가 PC .	
[]	가 999-9999 .	A B [] [] (→79). C 0001" 가 "100- D [] [] []

[가]	<ul style="list-style-type: none"> 가 가 	<ul style="list-style-type: none"> (→82). A/S
[]	5,000	4,999
[]	<ul style="list-style-type: none"> 	<ul style="list-style-type: none"> (→65). (→65).
[N]	가	
[Y]		
[가]	0.3M	
[가]	<ul style="list-style-type: none"> FinePix F480 가 	
[가]	DPOF 1000 가	999 DPOF
[]	DPOF가 DPOF	DPOF
[r]		

[[r]]	FinePix F480	
[]	가 PC	<ul style="list-style-type: none"> • USB () •
[]	PictBridge	<ul style="list-style-type: none"> • 가 • 가 •
[]	PictBridge	<p>가 가 가</p> <p>가 가 [MENU/OK]</p>
[]	PictBridge	<ul style="list-style-type: none"> • JFIF-JPEG Exif-JPEG 가 • 가 • FinePix F480 ?




 





Z

	[POWER]			10, 20
		가		12
		가		12
		AC	가	AC
	가	가	가	10, 20
		가		20
			가	10, 20
				10, 20
		AC	가	—
		가		12
		가		12
		가		—
		가	A/S	—

Z

LCD		[] 言語/LANG. 가	[]	22
		가		

 Q

		가		48
		가  , ,  ,  ,  OFF		39
				10, 20
		가 [C SUPPRESSED FLASH]	[C SUPPRESSED FLASH]	47
		가 [AUTO]  ,  ,  ,  ,  OFF		39, 48
	가	가		46, 48
		가 가		23
	가	가		–
		{ 가		24, 27, 105
		가		25, 105
		()	CCD	–

Z

		가 AC	AC	
			PC 가	—

Z

/	가			75, 81
		/ 가	/ 가	8, 73
		가가 가	가	8, 75
	[]			65
	[]			17

Z

Connecting to TV	TV 가	가 TV	TV	85
		A/V	가 TV	74, 85
		TV "TV"가	TV "VIDEO"	–
			[NTSC] [PAL]	76, 78
		TV		–
	TV 가		[NTSC] [PAL]	76, 78
PC	PC 가	USB PC	USB	95
	PictBridge	• USB •	• USB •	86

Q

z

	가	가	/ DC AC DC 가	10, 20
				10, 20
	가	가	/ DC AC DC 가 A/S	10, 12, 20

FinePix F480	
	815
CCD	1/2.5
	(12 MB)/xD-Picture Card (16/32/64/128/256/512 MB/1 GB/2 GB) /SD/SDHC (FUJIFILM (→14))
	: DCF : Exif ver.2.2 JPEG, DPOF * : AVI , JPEG , DPOF :
	: 3264 × 2448 /3264 × 2176 / 2304 × 1728 /1600 × 1200 / 640 × 480 (i /% /4 /2 /)
	120
	4 F2.7-F5.4
	f=4.6 mm-18.4 mm (35mm 28 mm-112)

Q

	6.9 (4 : 27.6)
()	F2.7/F5.4
	: 40 cm ~ : 5 cm ~ 80 cm : 30 cm ~ 80 cm
	AUTO/Equivalent ~ ISO 100/200/400/800 ()
	TTL 64-zones metering
	AE
	☺ ()/m ()/i ()/l ()/8 ()/N ()/1 ()/5 ()/10 ()/ ☹ ()/* ()/Y ()/OFF (MUSEUM)/100 ()
	1/3 EV -2 EV ~ +2 EV 가 (s)
	4 ~ 1/1500 ()
	: 3 (0.6 /)
	: -AF AF : TTL AF : AF()

	NP-40N, AC	AC-5VX (), DC coupler CP-40N ()
가		
	NP-40N	150
CIPA(Camera & Imaging Products Association)		
():		
LCD 23 xD-Picture Card		
30 , 2 , 10 ()		
• : 가 가 가		
가 가 가		
(W/H/D)	95.6 mm × 55.4 mm × 23.0 mm ()	
()	140 g(,)	
	159 g ()	
	: 0°C ~ +40°C	
	: 80% ()	

z xD-Picture Card, SD

가

/

		i F	i N	%	4	2		\$ (30 fps)
		3264 × 2448		3264 × 2176	2304 × 1728	1600 × 1200	640 × 480	320 × 240
		4.0 MB	2.0 MB	2.0 MB	980 KB	630 KB	130 KB	QVGA (30 fps)
(12MB)		2	5	6	11	19	93	20
xD-Picture Card	16 MB	3	7	8	15	25	123	27
	32 MB	7	15	17	31	50	247	54
	64 MB	16	32	35	64	101	497	110
	128 MB	32	64	72	128	204	997	221
	256 MB	64	129	145	257	409	1997	7.4
	512 MB	130	259	290	515	818	3993	14.8
	1 GB	260	519	581	1031	1639	7995	29.6
	2 GB	519	1031	1162	2063	3198	15992	59.2
SD	512 MB	126	251	281	498	793	3867	14.3
	1 GB	252	503	563	999	1588	7745	28.7
	2 GB	505	1007	1126	1998	3177	15490	57.3
SDHC	4 GB	1008	2001	2256	4002	6204	31024	114.8
	8 GB	2005	3978	4485	7957	12334	61672	228.3

* 2GB가
가

2GB

DPC-M2GB

"M"

xD-Picture Card

() PC

가

, xD-Picture Card

*

*

가

()

*

(, , , 가 가)

가

*

가

가

EV

. EV 가 , CCD 가 () 가 CCD

CCD 가 EV 1 가 가 EV 1

(fps)

() , 10 1

10 fps

TV

30 fps

(NTSC)

JPEG

Joint Photographic Experts Group

()

JPEG

AVI(Audio Video Interleave)

JPEG

JPEG QuickTime 3.0

(Smear)

가 , CCD

Exif Print

Exif

가